

First Class

lever dispenser



Use First Class

Use the First Class lever dispenser for measuring out all types of smooth sauces. The plexiglass cover disc rests on top of the sauce and ensures that barely any sauce remains behind in the pail.



1. Handle
2. Top bayonet fitting
3. Outflow
4. Pump casing
5. Suction tube
6. Cover disc
7. Plastic valve

First-time use with a new pail of sauce:

1. Put the dispenser into a pail of hot water.
2. Press the handle down a number of times to pump the hot water through the outflow.
3. Take the dispenser out of the pail and allow the water to run out of it.
4. Put the dispenser into a pail of sauce.
5. Push the handle down.
6. Hold a finger against the end of the outflow and bring up the handle.
7. Repeat steps 5 and 6 until the sauce comes out of the outflow.


Then:

1. Hold a small container under the outflow.
2. Push the handle down to pump a portion of sauce into the container.

Cleaning

Recommendation: clean the dispenser at least once a week and when changing the pail.

1. Take the dispenser out of the pail.
2. Rinse off any sauce under a hot tap.
3. Put the dispenser into a pail of hot water.
4. Press the handle down a number of times to pump the hot water through the outflow.
5. Remove the plastic valve on the bottom of the suction tube; turn anticlockwise and pull downwards (bayonet fitting):

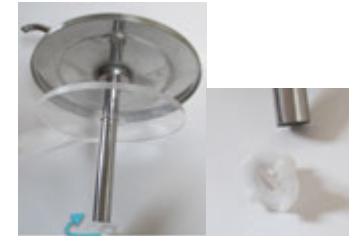

6. Slide the cover disk down to take it out.
7. Remove the O-rings:
 - from the valve on the suction tube (red)
 - from the cover disc (red)
8. Put the cover disc and the plastic valve in the dishwasher.
9. The bayonet on the pump casing is fitted by means of a bayonet fitting. Place the spanner (supplied) on the bayonet



10. Move the handle up to pull the pump casing upwards:



11. Take the handle out of the support and remove the pump casing.
12. Turn the top of the pump casing left and pull it up to open the bayonet:



13. Set aside the plastic spring holder (with the bayonet and handle).
14. Remove the membrane from the plastic bottom of the stainless steel tube.
15. Put the stainless steel tube in the dishwasher and turn it on.
16. Use the brush (supplied) to clean the suction tube and the outflow of the dispenser. Use a pail of hot water and a neutral detergent.
17. Clean the plastic spring holder, the handle, the O-rings and the membrane under the tap.

Assembly after cleaning

1. Put the membrane on the plastic bottom of the stainless steel tube.
2. Fit the O-rings
 - in the cover disc
 - on the plastic valve
3. Lightly lubricate the O-rings and the suction tube (using a grease suitable for foods).
4. Slide the cover disc on the suction tube (with the recess for the plastic valve downwards).

5. Put the plastic valve on the bottom of the suction tube (bayonet fitting).
6. Put the plastic spring holder in the stainless steel tube and tighten it (bayonet fitting).
7. Mount the pump casing.
8. Insert the outer end of the handle in the support.
9. Place the spanner on the top edge of the pump casing.
10. Push the handle down and turn the spanner clockwise to tighten the pump casing.

Troubleshooting

Problem	Solution
The movement made by the handle is smaller than usual.	The spring is faulty. Replace the spring.
The handle does not move back completely.	The spring is faulty. Replace the spring.
The sauce portion coming out of the outflow contains air bubbles.	The O-rings are worn. Replace the O-rings.
The sauce portions coming out of the outflow are not of the same quantity.	The O-rings are worn. Replace the O-rings.

Spare parts

The following spare parts are available:

- Spare parts set with 5 O-rings and 1 membrane

Please contact Bereila if you need any spare parts.

Replacing the spring

1. Remove the pump casing.
2. Remove the stainless steel tube.
3. Remove the plexiglass plunger (on the bottom of the spring holder; Allen key No. 4):



4. Carefully unscrew the top of the spring holder. **Note:** the plastic spring holder contains a spring, the top could jump out..



5. Remove the spring and fit a new one.
6. Press the top onto the spring holder and tighten.
7. Screw the plexiglass plunger onto the bottom of the spring holder.

Replacing the O-rings

The First Class dispenser contains 5 O-rings:

- The spring housing has 2 O-rings (1 black, 1 white)
- The plexiglass plunger has 1 O-ring (red)
- The plastic valve at the bottom of the suction tube has 1 O-ring (red)
- The cover disc has 1 O-ring (red)

Note: Never remove the O-rings with a sharp object. Clean the O-rings and membrane under the tap. Lightly lubricate the O-rings after assembly (using a grease suitable for foods).

Contact us

Apparatenfabriek Bereila B.V.
 Industrieweg 7a
 NL-9781 AC Bedum
 t.+31 50 30 12 297
 info@bereila.nl
 www.bereila.nl

A Member of the
 ASEPT Group

