


A Member of the
ASEPT Group



Bereila *DispoJet*

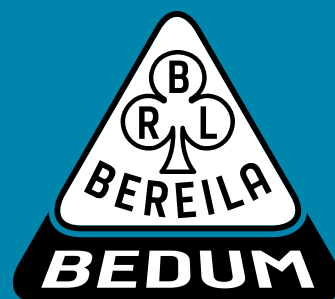

The "red" DispoJet is for ketchups. The "yellow" DispoJet is for mayonnaise, mustard and emulsion-based sauces. The "yellow" DispoJet has a follower disc for maximum emptying. It empties up to an amazing 98%!



◀ The pump unit is easily removed for very simple cleaning.



You can adjust the portion size and dispensing speed using the buttons on the rear of the device, where you will also find the rinsing function.



▼ The DispoJet is supplied standard with a set of stickers, to identify the control buttons.

MAYONAISE	POMMESS.	KLEIN	KLEIN	KLEIN
MAYONAISE	POMMESS.	KLEIN	KLEIN	KLEIN
FRISSAUS	KNOBLAUCH	GROOT	GROOT	GROOT
FRISSAUS	KNOBLAUCH	GROOT	GROOT	GROOT
TOMAAT	GARLIC	GROSS	GROSS	GROSS
TOMAAT	GARLIC	GROSS	GROSS	GROSS
CURRY	BBQ	LARGE	LARGE	LARGE
CURRY	BBQ	LARGE	LARGE	LARGE
MOSTERD	SPECIAAL	SMALL	SMALL	SMALL
MOSTERD	SPECIAAL	SMALL	SMALL	SMALL
REMOULADE	SPECIAL	PORTIE	PORTIE	PORTIE
REMOULADE	SPECIAL	PORTIE	PORTIE	PORTIE
KNOFLOOK	SPECIAL	BEKER	BEKER	BEKER
KNOFLOOK	CUP	BEKER	BEKER	BEKER
RAVIGOTTE	CUP	BECHER	BECHER	BECHER
RAVIGOTTE	CUP	PORTION	PORTION	PORTION

◀ An attractive brushed stainless steel housing is available for all sizes of pail.



Electric tabletop sauce dispensing system

Bereila introduces the DispoJet, a new innovative and efficient sauce dispensing system for any location where sauces are dispensed from pails. The DispoJet conveniently serves cold sauces such as salad cream, mayonnaise, curry sauce, ketchup and others, quickly and efficiently. This is an electric sauce pump which is fitted directly to a 10-litre pail on the worktop, thus saving space under your worktop. The system is electrically operated, safely and economically on low voltage. All you need is an electric socket.

Portion Control

The DispoJet serves a consistent portion of sauce, adjustable by you. Portion Control prevents wasteful over-portioning. The DispoJet allows you to adjust the portion size and speed for each button individually. You can adjust it to serve a large, quick portion for example, or a smaller portion dispensed at a lower speed. The choice is yours.

Physical effort

At locations and on occasions where many portions need to be dispensed in succession, for example during "rush hour", and

during funfairs, festivals and other events, manual pumping can result in considerable physical effort. The DispoJet completely removes any effort, with a simple press of the button.

Two versions, three sizes

The innovative DispoJet was designed for large sauce pails, and is available in two versions: "Yellow" for mayonnaise and other emulsion-based sauces, and "Red" for ketchups and other thinner sauces. The "yellow" version has a follower disc, which ensures maximum emptying of the pail, up

to an amazing 98%! Three sizes are available as standard per version, with regard to the diameter and depth of the pail. Lid sets are interchangeable, if you wish to use various pails.

Efficient

The DispoJet quickly and simply serves a consistent portion size. This is a low-voltage device using the enclosed adapter, and is extremely economical in electricity consumption.

The DispoJet needs little maintenance, and the built-in rinsing function greatly simplifies the cleaning process.

Advantages of the Bereila DispoJet

- **Portion Control prevents wasteful over-portioning**
- **Economic dispensing without physical effort**
- **Efficient and quick dispensing of sauces**
- **Maximum emptying, up to an amazing 98%!**
- **Plug 'n play: simple operation and cleaning**
- **Adjustable portion size and dispensing speed**

Art. no.	Description	Input converter	Output converter
6400004	DispoJet "yellow" round 275mm, deep 255mm	230V/24V	24V 6Amp
6400054	DispoJet "red" round 275mm, deep 255mm	230V/24V	24V 6Amp
0390020	Optional stainless steel sleeve round 293mm, heigth 256mm	230V/24V	24V 6Amp
6400002	DispoJet "yellow" round 265mm, deep 255mm	230V/24V	24V 6Amp
6400052	DispoJet "red" round 265mm, deep 255mm	230V/24V	24V 6Amp
0390021	Optional stainless steel sleeve round 288mm, heigth 256mm	230V/24V	24V 6Amp
6400006	DispoJet "yellow" round 285mm, deep 245mm	230V/24V	24V 6Amp
6400056	DispoJet "red" round 285mm, deep 245mm	230V/24V	24V 6Amp
0390022	Optional stainless steel sleeve round 298mm, heigth 256mm	230V/24V	24V 6Amp

Bereila, dispenser specialist since 1971

Apparatenfabriek Bereila B.V. is the leading specialist in sauce dispensing systems for the catering and food service sectors.

Bereila's sauce dispensers for portioning hot and cold sauces are of the highest quality, feature a long life cycle and are exceptionally user-friendly. The systems are easy to operate, clean and maintain.

As well as its standard product range, Bereila specialises in the development and manufacture of customer-specific dispensing solutions, private label and OEM products.

Apparatenfabriek Bereila B.V. is a member of the ASEPT Group.

A Member of the
ASEPT Group



Industrieweg 7a,
NL-9781 AC Bedum
The Netherlands

T +31 50 3012297
E info@bereila.nl
W www.bereila-shop.eu